


Guide to installing the Slimline 50 Under Eave with Canter Lever Arms

Slimline 50 Under Eave with Canter Lever Arms has a 50x50 box frame with 10mm polycarb sheet mounted on the top,

The wall brackets with the arms are mounted to the wall first, the arms seat under the eave and projected out to allow the awning panel to sit on top. then you screw the awning to the fascia and to the front edge of the arms.


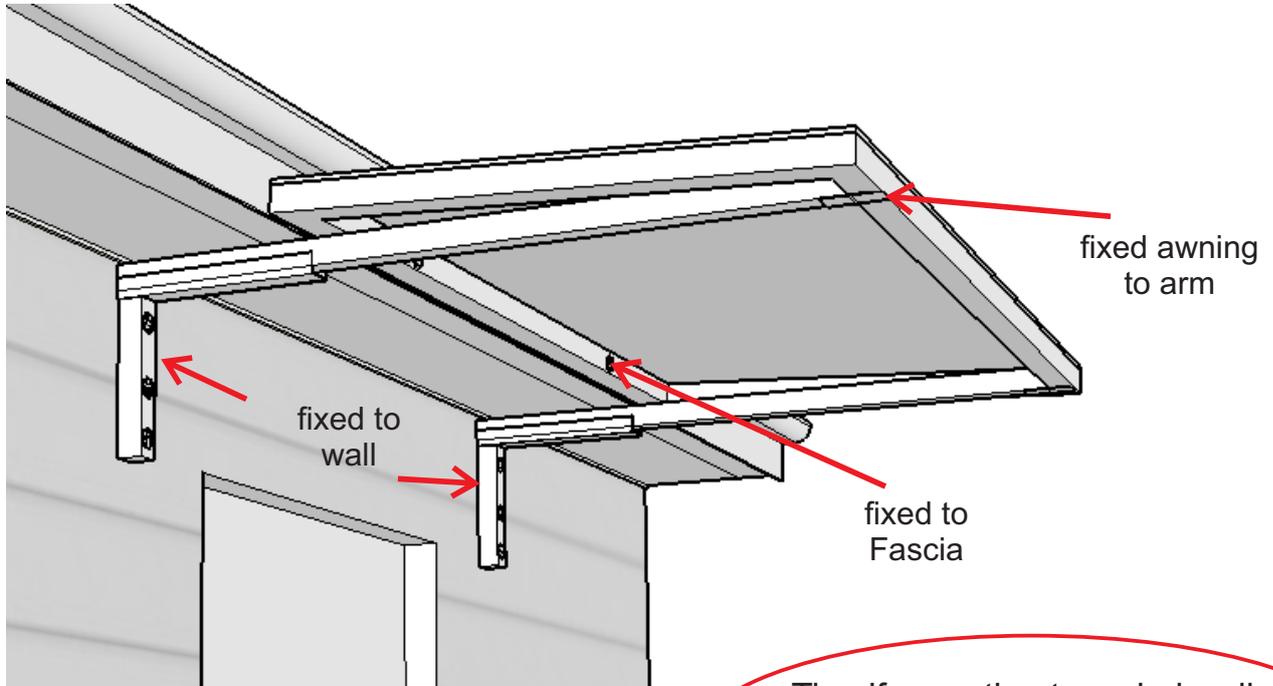


Tip : if mounting to a clad wall the brackets need to be fixed into the studs behind the cladding

The 3 Main steps to installing the Slimline50

- 1- Mount the brackets to wall
- 2- Fit the awning on the bracket
- 3- Screw the awning to the fascia and arms


Put together the wall brackets and the arms
fixed the 50x50 arm to the wall bracket as per drawing

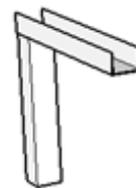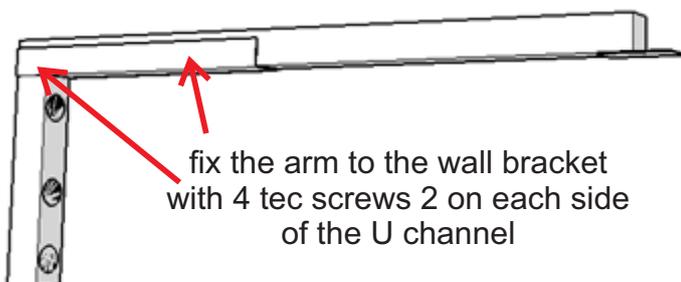

the arms are made
In two parts
the wall bracket
and the arm




The arm has a tongue that is fixed to the front 50x50 rail on the awning

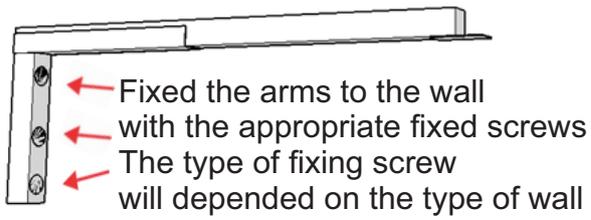


Tip:
When mounting the wall brackets and arms push hard up against the eave or fascia

Once the brackets are securely mounted to the wall
Mount the awning panel on top of the brackets

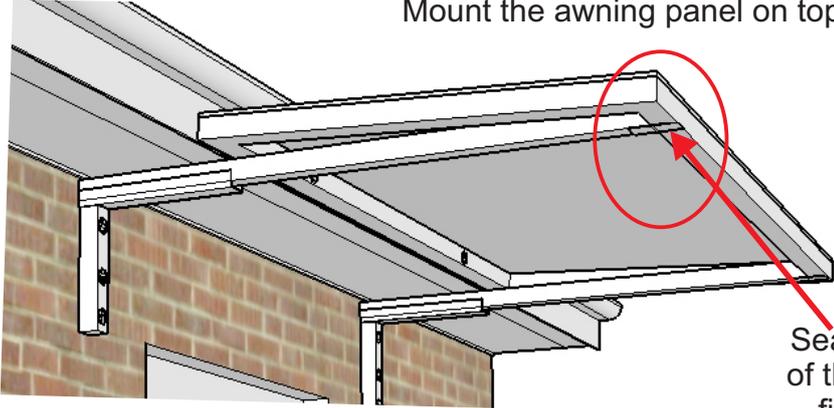

Seat the front rail on top of the tongue on the arm
fix it using tec screw

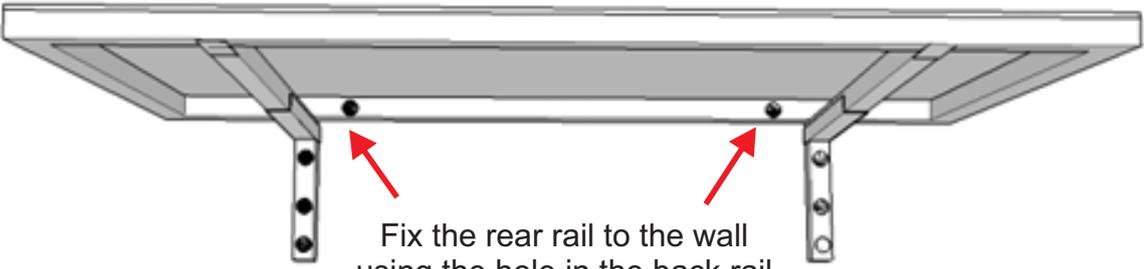

Fix the rear rail to the wall using the hole in the back rail

