

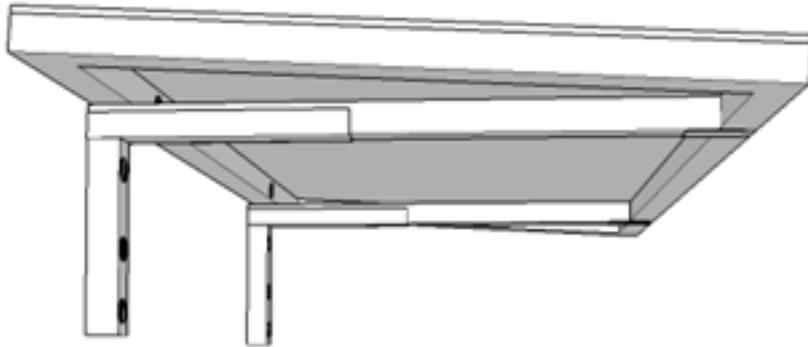


Guide to install the Slimline 50 with Canter Lever Arms

The slimline 50 canter lever has a 50x50 box frame with 10mm polycarb sheet mounted on the top, it mounted to the wall with arms that are fixed to the underside of the awning

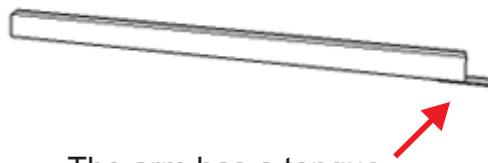


the arms are made in two parts the wall bracket and the arm

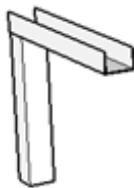


The arm has a tongue that is fixed to the front 50x50 rail

Make the arms first
fixed the 50x50 arm to the wall bracket as per drawing

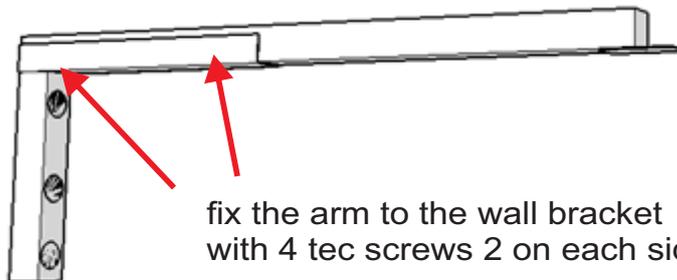


fix the arm to the wall bracket
with 4 tec screws 2 on each side of the U channel

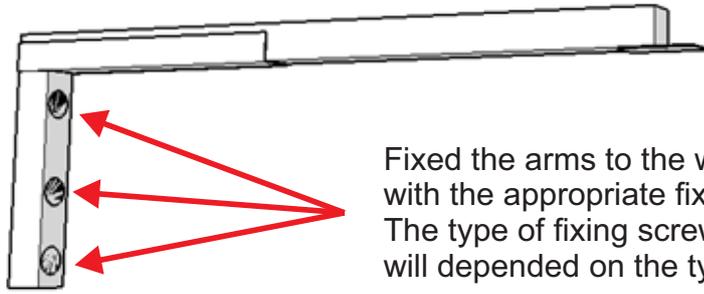


Fixed the arms to the wall
with the appropriate fixed screws
The type of fixing screw
will depended on the type of wall

Once the brackets are securely mounted to the wall
Mount the awning panel on top of the brackets

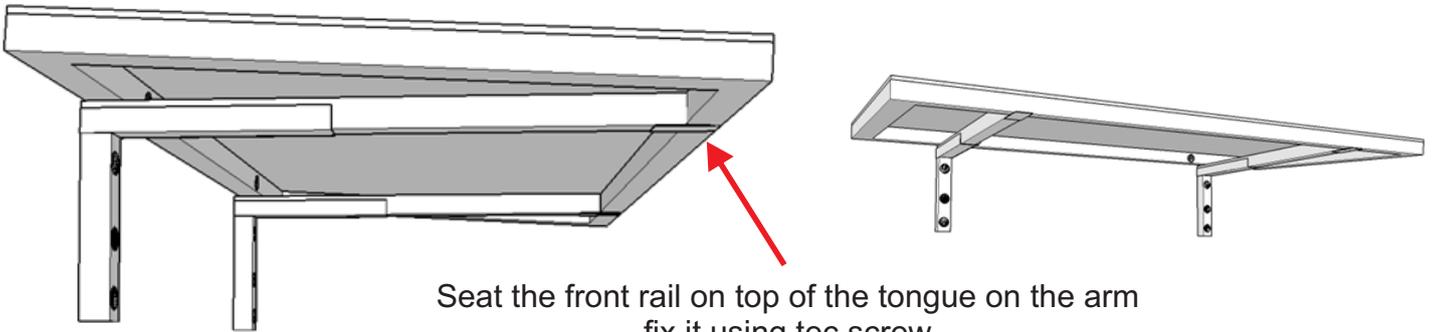

Seat the front rail on top of the tongue on the arm
fix it using tec screw

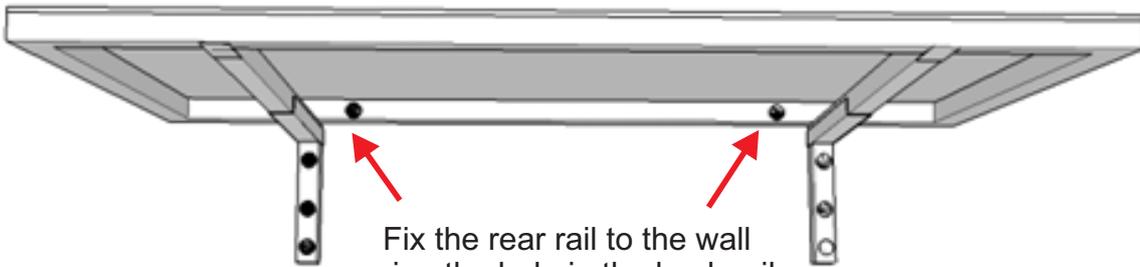

Fix the rear rail to the wall
using the hole in the back rail

seal the awning to the wall